

PNEUDRI MPX

Heatless (PSA) Regeneration High Efficiency Compressed Air Dryers



PNEUDRI heatless dryers can provide the simple and cost effective solution for the provision of clean dry compressed air.

Using patented Parker domnick hunter technology, PNEUDRI heatless dryers provide the ultimate in performance, security and reliability.

Compressed air purification equipment must deliver uncompromising performance and reliability whilst providing the right balance of air quality with the lowest cost of operation. Many manufacturers offer products for the filtration and purification of contaminated compressed air, which are often selected only upon their initial purchase cost, with little or no regard for the air quality they provide, the cost of operation throughout their life or indeed their environmental impact. When purchasing purification equipment, delivered air quality, the overall cost of ownership and the equipment's environmental impact must always be considered.



The Parker domnick hunter Design Philosophy

Parker domnick hunter has been supplying industry with high efficiency filtration and purification products since 1963. Our philosophy 'Designed for Air Quality & Energy Efficiency' ensures products that not only provide the user with clean, high quality compressed air, but also with low lifetime costs and reduced CO₂ emissions.



Contact Information:

Parker Hannifin Ltd
domnick hunter Industrial Division
Dukesway, Team Valley Trading Estate
Gateshead, Tyne and Wear
England NE11 0PZ

Tel: +44 (0)191 402 9000
Fax: +44 (0)191 482 6296
Email: dhindsales@parker.com
www.domnickhunter.com

Benefits:

- PNEUDRI dryers provide efficient removal of water vapour from compressed air
- Delivered air quality is in accordance with all editions of ISO8573-1, the international standard for compressed air quality
- Improves production efficiency and reduces maintenance costs and downtime
- Pressure Dewpoint's of -70°C, -40°C & -20°C (ISO8573-1:2010 Classes 1, 2 & 3) are available
- Unlike refrigeration dryers, the -40°C & -70°C pressure dewpoint's offered by PNEUDRI not only eliminates corrosion, it also inhibits the growth of micro-organisms
- Low noise level <75 db (A)
- Optional Energy Management System available
- Compared to traditional twin tower dryer designs, PNEUDRI's unique modular construction and snowstorm filling of the adsorbent desiccant material provides:
 - Consistent dewpoint performance
 - A smaller, more compact and lightweight dryer
 - Fits through a standard doorway reducing installation costs
 - 100% standby at a fraction of the cost of twin tower designs
 - Simple to install and easy to maintain
 - Offers increased flexibility during maintenance (multi bank)
 - Easily expanded to meet increased system demand
 - Fully corrosion protected inside and out
 - Approvals to International Standards (CE, CSA (US + Canada), CRN)
 - Eliminates the need for costly annual pressure vessel inspections
 - 10 year guarantee on pressure envelope



ENGINEERING YOUR SUCCESS.

Dryer Performance

Dryer Models	Dewpoint (Standard)		ISO8573-1:2010 Classification (standard)	Dewpoint (Option 1)		ISO8573-1:2010 Classification (Option 1)
	°C	°F		°C	°F	
MPXS (Smart)	-40	-40	Class 2	-70	-100	Class 1
MPXE (Electronic)	-40	-40	Class 2	-70	-100	Class 1

Product Selection

PNEUDRI MAXIplus MPX

Stated flows are for operation at 7 bar g (100 psi g) with reference to 20°C, 1 bar a, 0% relative water vapour pressure. For flows at other pressures apply the correction factors shown.

Model	Pipe Size	L/s	m³/min	m³/hr	cfm
MPX□110	G 4	652	39	2346	1381
MPX□112	G 4	782	47	2815	1657
MPX□210	G 4	1303	78	4692	2762
MPX□212	G 4	1564	94	5630	3314
MPX□310	G 4	1955	118	7038	4143
MPX□312	G 4	2346	141	8445	4971

Correction Factor

Temperature Correction Factor CFT							
Maximum Inlet Temperature	°C	25	30	35	40	45	50
	°F	77	86	95	104	113	122
	CFT	1.00	1.00	1.00	1.04	1.14	1.37

Pressure Correction Factor CFP											
Minimum Inlet Pressure	bar g	4	5	6	7	8	9	10	11	12	13
	psi g	58	73	87	100	116	131	145	160	174	189
	CFP	1.60	1.33	1.14	1.00	0.89	0.80	0.73	0.67	0.62	0.57

Dewpoint Correction Factor CFD			
Required Dewpoint	PDP °C	-40	-70
	PDP °F	-40	-100
	CFD	0	1.43

Dryer Selection

To correctly select a dryer model, the flow rate of the dryer must be adjusted for the minimum operating pressure and, maximum operational temperature of the system. If the dewpoint required is different to the standard dewpoint of the dryer then the flow rate must also be adjusted for the required outlet dewpoint.

- Obtain the minimum operating pressure, maximum inlet temperature and maximum compressed air flow rate at the inlet of the dryer. Obtain the outlet dewpoint required.
- Select correction factor for maximum inlet temperature from the CFT Table (always round up e.g. for 37°C use 40°C correction factor)
- Select correction factor for minimum inlet pressure from the CFP table (always round down e.g. for 5.3 bar use 5 bar correction factor)
- Select correction factor for required outlet dewpoint from the CFD table
- Calculate minimum drying capacity
Minimum Drying Capacity = Compressed Air Flow x CFT x CFP x CFD
- Using the minimum drying capacity, select a dryer model from the flow rate tables above (dryer selected must have a flow rate equal to or greater than the minimum drying capacity)

If the minimum drying capacity exceeds the maximum values of the models shown within the tables, please contact Parker domnick hunter for advice regarding larger multi-banked dryers.


Technical Data

Dryer Models	Min Operating Pressure		Max Operating Pressure		Min Operating Temp		Max Operating Temp		Max Ambient Temp		Electrical supply (standard)	Electrical supply (optional)	Thread Connections	Noise Level dB (A)
	bar g	psi g	bar g	psi g	°C	°F	°C	°F	°C	°F				
MPXS	4	58	13	190	2	35	50	122	55	131	230 V 1ph 50/60Hz	110 V 1PH 50/60Hz	BSPP or NPT	<75
MPXE	4	58	13	190	2	35	50	122	55	131	230 V 1ph 50/60Hz	110 V 1PH 50/60Hz	BSPP or NPT	<75

Controller Options

Controller Options	Function									
	Power on Indication	Fault Indication	Display Fault Condition Values	Service Interval Indication	Service Countdown Timers	Configurable Alarm Settings	Remote Volt Free Alarm Contacts	Filter Service Timer	DDS Energy Management System	
SMART	•	•		•			•			
SMART DDS	•	•		•			•	•		
ELECTRONIC	•	•	•	•	•	•	•	•		

Dryer Coding Example

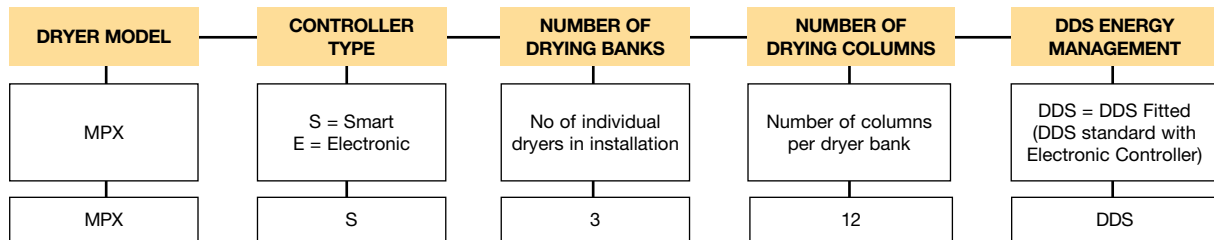

Example Dryer Model MPXS312DDS

*Please state dewpoint at the time of ordering

□ = B (BSPT) □ = N (NPT)

Model	Filter Pipe Size BSPT or NPT	Inlet General Purpose Pre-filter	Inlet High Efficiency Filter	Outlet Dust Filter
MPX□110	4"	AO060K□FX	AA055I□FX	AR055I□FX
MPX□112	4"	AO060K□FX	AA055I□FX	AR055I□FX

Weights and Dimensions

Model	Pipe Size	Height (H)		Width (W)		Depth (D)		Weight	
		mm	ins	mm	ins	mm	ins	kg	lbs
MPX□110	G 4	1788	70.4	2223	87.5	550	21.7	895	1969
MPX□112	G 4	1788	70.4	2551	100.4	550	21.7	1025	2255



Recommended Filtration

Adsorption dryers are designed to remove water vapour from compressed air. For optimum performance and to deliver air quality in accordance with all editions of ISO8573-1, liquid water, oil and solid particulate must be first be removed using Parker domnick hunter OIL-X EVOLUTION Grade AO, AA filters. Grade AR filters should also be fitted to the outlet of the dryer for solid particulate removal.

Parker Worldwide

AE – UAE, Dubai
Tel: +971 4 8127100
parker.me@parker.com

AR – Argentina, Buenos Aires
Tel: +54 3327 44 4129

AT – Austria, Wiener Neustadt
Tel: +43 (0)2622 23501-0
parker.austria@parker.com

AT – Eastern Europe, Wiener Neustadt
Tel: +43 (0)2622 23501 900
parker.easteurope@parker.com

AU – Australia, Castle Hill
Tel: +61 (0)2-9634 7777

AZ – Azerbaijan, Baku
Tel: +994 50 2233 458
parker.azerbaijan@parker.com

BE/LU – Belgium, Nivelles
Tel: +32 (0)67 280 900
parker.belgium@parker.com

BR – Brazil, Cachoeirinha RS
Tel: +55 51 3470 9144

BY – Belarus, Minsk
Tel: +375 17 209 9399
parker.belarus@parker.com

CA – Canada, Milton, Ontario
Tel: +1 905 693 3000

CH – Switzerland, Etoy
Tel: +41 (0)21 821 87 00
parker.switzerland@parker.com

CL – Chile, Santiago
Tel: +56 2 623 1216

CN – China, Shanghai
Tel: +86 21 2899 5000

CZ – Czech Republic, Klecany
Tel: +420 284 083 111
parker.czechrepublic@parker.com

DE – Germany, Kaarst
Tel: +49 (0)2131 4016 0
parker.germany@parker.com

DK – Denmark, Ballerup
Tel: +45 43 56 04 00
parker.denmark@parker.com

ES – Spain, Madrid
Tel: +34 902 330 001
parker.spain@parker.com

FI – Finland, Vantaa
Tel: +358 (0)20 753 2500
parker.finland@parker.com

FR – France, Contamine s/Arve
Tel: +33 (0)4 50 25 80 25
parker.france@parker.com

GR – Greece, Athens
Tel: +30 210 933 6450
parker.greece@parker.com

HK – Hong Kong
Tel: +852 2428 8008

HU – Hungary, Budapest
Tel: +36 1 220 4155
parker.hungary@parker.com

IE – Ireland, Dublin
Tel: +353 (0)1 466 6370
parker.ireland@parker.com

IN – India, Mumbai
Tel: +91 22 6513 7081-85

IT – Italy, Corsico (MI)
Tel: +39 02 45 19 21
parker.italy@parker.com

JP – Japan, Tokyo
Tel: +81 (0)3 6408 3901

KR – South Korea, Seoul
Tel: +82 2 559 0400

KZ – Kazakhstan, Almaty
Tel: +7 7272 505 800
parker.easteurope@parker.com

LV – Latvia, Riga
Tel: +371 6 745 2601
parker.latvia@parker.com

MX – Mexico, Apodaca
Tel: +52 81 8156 6000

MY – Malaysia, Shah Alam
Tel: +60 3 7849 0800

NL – The Netherlands, Oldenzaal
Tel: +31 (0)541 585 000
parker.nl@parker.com

NO – Norway, Asker
Tel: +47 66 75 34 00
parker.norway@parker.com

NZ – New Zealand, Mt Wellington
Tel: +64 9 574 1744

PL – Poland, Warsaw
Tel: +48 (0)22 573 24 00
parker.poland@parker.com

PT – Portugal, Leca da Palmeira
Tel: +351 22 999 7360
parker.portugal@parker.com

RO – Romania, Bucharest
Tel: +40 21 252 1382
parker.romania@parker.com

RU – Russia, Moscow
Tel: +7 495 645-2156
parker.russia@parker.com

SE – Sweden, Spånga
Tel: +46 (0)8 59 79 50 00
parker.sweden@parker.com

SG – Singapore
Tel: +65 6887 6300

SK – Slovakia, Banská Bystrica
Tel: +421 484 162 252
parker.slovakia@parker.com

SL – Slovenia, Novo Mesto
Tel: +386 7 337 6650
parker.slovenia@parker.com

TH – Thailand, Bangkok
Tel: +662 717 8140

TR – Turkey, Istanbul
Tel: +90 216 4997081
parker.turkey@parker.com

TW – Taiwan, Taipei
Tel: +886 2 2298 8987

UA – Ukraine, Kiev
Tel: +380 44 494 2731
parker.ukraine@parker.com

UK – United Kingdom, Warwick
Tel: +44 (0)1926 317 878
parker.uk@parker.com

US – USA, Cleveland
Tel: +1 216 896 3000

VE – Venezuela, Caracas
Tel: +58 212 238 5422

ZA – South Africa, Kempton Park
Tel: +27 (0)11 961 0700
parker.southafrica@parker.com

European Product Information Centre

Free phone: 00 800 27 27 5374

(from AT, BE, CH, CZ, DE, EE, ES, FI, FR, IE, IL, IS, IT, LU, MT, NL, NO, PT, SE, SK, UK)